



Model CT200S24



IMPORTANT! DO NOT DESTROY

It is the customer's responsibility to have all operators and service personnel read and understand this manual.

CORDLESS 18GA STRAIGHT BRAD FINISH NAILER

OPERATING MANUAL

Contents

Subject	Page
Introduction and Warranty	2
An Overview of the Paslode Cordless 18GA Straight Brad Finish Nailer	3
Safety Instructions	5
Battery and Charging System	8
Fuel Cell	10
Preparing the Paslode Cordless 18GA Straight Brad Finish Nailer for Use	13
Paslode Cordless 18GA Straight Brad Finish Nailer Operation	14
Fasterners and Applications	15
Servicing	16
Tool Schematic	18
Troubleshooting	20

The battery charger system meets all safety requirements for power tools.







is a trademark
Paslode
An Illinois Tool Works Company
155 Harlem Avenue
Glenview, IL 60025
www.paslode.com

Pasiode Power Nailers are designed and assembled in the U.S.A.

Paslode® is a member of:







Introduction and Warranty

Paslode Cordless 18GA Straight Brad Finish Nailer Operating Manual

This manual is intended to acquaint you with the Paslode Cordless 18GA Straight Brad Finish Nailer. Unlike other power fastening tools, this Cordless Nailer is powered by an internal combustion linear motor. In simpler terms, your Cordless Nailer is powered by a motor similar to the one that powers an automobile. The Nailer ignites a fuel and air mixture to produce the energy to drive the motor. which in turn drives the fastener. The Nailer is totally self-contained. It carries its own fuel supply and battery, along with a supply of fasteners. For ease of use, this manual is divided into sections (see Contents). Each section of the manual is written with you, the tool operator, in mind. We have left out many of the technical terms so that you can easily understand how to get the maximum performance from your Cordless Brad Nailer, and how to avoid damaging the tool or injuring yourself. But, to accomplish this, we need you to do two things:

1. READ THE MANUAL FROM COVER TO COVER BEFORE USING THE TOOL.

2. FOLLOW ALL INSTRUCTIONS IN THE MANUAL.

The Cordless Brad Nailer should be handled like other power fastening tools that you use. Like most tools, when used improperly injury could result. If you are going to allow others to use the Nailer, it is your responsibility to make sure that they also read and comply with the instructions in this manual before attempting to operate the tool.

Should you have questions about the Cordless Brad Nailer, or wish to obtain additional copies of this manual, please contact your Paslode representative. The space below is provided so that you may record your representative's name and contact info.

Name		
Address		
City, State, Zip		
Phone Number		

Paslode Cordless Warranty and Limitations

Paslode warranties that new Cordless power fastening tools, parts and accessories will be free from defects in material and workmanship for the period shown below, after the date of delivery to the original user.

ONE-YEAR LIMITED WARRANTY

A one-year warranty will apply to all parts, except those specifically covered by an extended warranty.

FIVE-YEAR EXTENDED LIMITED WARRANTY

A five-year warranty will apply to all molded nylon parts:

- Motor Housing, Cap, and Grille
- · Handle Halves and Actuator
- Trigger
- Magazine Parts

CORDLESS 2 YEAR SERVICE PROMISE

Paslode will service the tool and replace all parts (including battery and charger system) which have failed during normal use for FREE for a period of 2 years from date of purchase.

For 2 Year Service Promise details and limitations see **paslode.com/service-and-support**

WARRANTY STATEMENT

This warranty is limited to tools sold and service requested in the United States. To obtain information on warranty service in the United States, refer to the Service Center listing that was provided with your tool.

Paslode's sole liability hereunder will be to replace any part or accessory which proves to be defective within the specific time period. Any replacement part or accessory provided in accordance with this warranty will carry a warranty for the balance of the period of warranty applicable to the part it replaces. This warranty does not apply to part replacement required due to normal wear.

This warranty is void on any tool which has been subjected to misuse, abuse, accidental or intentional damage, use with fasteners, fuel, batteries, or battery chargers not meeting Paslode specification, size, or quality, improperly maintained, repaired with other than genuine Paslode replacement parts, damaged in transit or handling, or which, in Paslode's opinion, has been altered or repaired in a way that affects or detracts from the performance of the tool.

PASLODE MAKES NO WARRANTY, EXPRESSED OR IMPLIED, RELATING TO MERCHANTABILITY, FITNESS OR OTHERWISE, EXCEPT AS STATED ABOVE, and Paslode's liability AS STATED ABOVE AND AS ASSUMED ABOVE is in lieu of all other warranties arising out of, or in connection with, the use and performance of the tool, except to the extent otherwise provided by applicable law. PASLODE SHALL IN NO EVENT BE LIABLE FOR ANY DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO, DAMAGES WHICH MAY ARISE FROM LOSS OF ANTICIPATED PROFITS OR PRODUCTION, SPOILAGE OF MATERIALS, INCREASED COST OF OPERATION, OR OTHERWISE.

Paslode reserves the right to change specifications, equipment or designs at any time without notice and without incurring obligation.

Overview of the Paslode Cordless 18GA Straight Brad Finish Nailer

Description

The Paslode Cordless 18GA Straight Brad Finish Nailer is a self-contained, fully portable nailer that uses liquid hydrocarbon fuel to power a unique linear drive internal combustion motor.

In order for you to fully understand the information contained in this manual, you need a basic understanding of the Cordless Nailer. As you can see in the illustration below, the Nailer is made up of three major areas: handle, motor, and magazine.

As you examine the Nailer, become familiar with the three major areas and the various components located in each of them.

The **Handle Assembly** contains the fuel cell, battery, indicator light, and trigger.

The **Motor Assembly** contains the cover and filter. the motor housing, the nose, and the depth-of-drive adjustment.

The **Magazine Assembly** contains the components to load and control the fasteners.

Specifications

Dimensions: Weight-with battery 46 lbs

> 11-1/2 inches Height Length 11 inches 3.54 inches Width Magazine 18GA straight

Cvcle Rate: Intermittent Operation -

2 to 3 brad nails per second

NOTE: Exceeding these cycle rates could cause the tool to overheat, resulting in loss of performance or damage to tool components.

By using the Paslode Cordless Brad Nailer at its recommended cycle rate, you will be able to drive several thousand nails in a typical workday.

Fasteners: 18GA Straight Brads

Magazine Capacity: 110 Straight Brad Nails

Battery: 7 volts DC, provides enough

energy to drive approximately 12.000 fasteners on a full


charge.

Fuel Cell: Part #816007

Liquid hydrocarbon -




Overview of the Paslode Cordless 18GA Straight Brad Finish Nailer

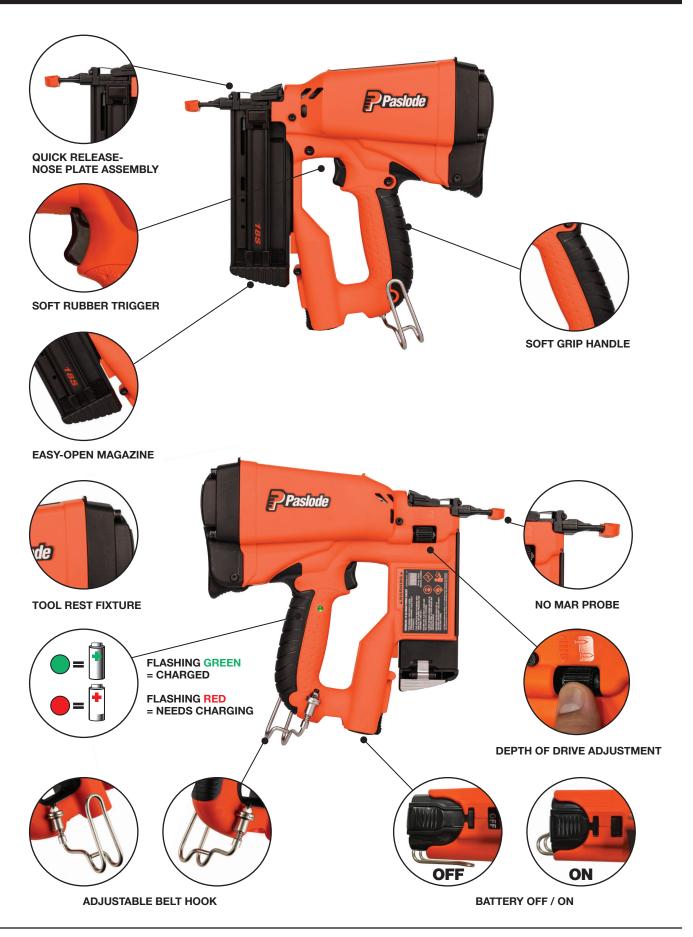

Safety Instructions

The following safety instructions have been included in this booklet to provide you with basic information necessary for safe operation of the Paslode Cordless 18GA Straight Brad Finish Nailer.

DO NOT ATTEMPT TO OPERATE THIS TOOL UNTIL YOU HAVE READ AND UNDERSTAND ALL SAFETY PRECAUTIONS AND MANUAL INSTRUCTIONS.

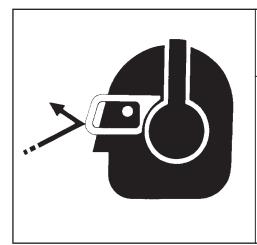



WARNING

Always wear EYE and EAR safety gear when working with or in the vacinity of the Paslode Cordless 18GA Straight Brad Finish Nailer.

- Eye protection must meet the requirements of ANSI Z87+ and should have side shields for increased protection.
- 2. NEVER ASSUME THE TOOL IS EMPTY.
- 3. NEVER ENGAGE IN "HORSEPLAY" WITH THE TOOL.

The Cordless Nailer is not a toy – it is a tool. Careless and improper use may result in a serious accident.

- 4. NEVER CARRY THE TOOL WITH YOUR FINGER ON, OR SQUEEZING THE TRIGGER. This practice may result in the accidental discharge of a fastener.
- 5. NEVER OPERATE A MALFUNCTIONING TOOL. Refer to the servicing or troubleshooting section of this manual to correct the problem. If the problem cannot be corrected, stop using the tool and report it to your supervisor or Paslode representative.
- 6. DO NOT LOAD FASTENERS WITH THE TRIG-GER AND/OR WORK CONTACTING ELEMENT PRESSED IN.
 - A fastener may be accidentally discharged.
- 7. NEVER OPERATE THE TOOL WITH THE PROBE REMOVED OR DISABLED.

This device helps reduce the possibility of accidental fastener discharge by preventing the tool from operating until it is completely against the work surface.

NEVER operate the tool if the Probe is not working properly.

- 8. ALWAYS POINT THE TOOL AWAY FROM YOURSELF AND OTHERS WHEN CLEARING A JAM OR REMOVING FASTENERS. Pull the follower slightly back and push the release lever. Tip the tool nose up slightly and fasteners should slide out of the rear of the magazine. If fasteners are jammed, refer to the appropriate servicing section of this manual.
- 9. NEVER OPERATE THE NAILER IF PARTS ARE LOOSE, DAMAGED OR MISSING.
- 10. DO NOT DRIVE FASTENERS INTO KNOTS OR ON TOP OF OTHER FASTENERS. A fastener may ricochet and cause serious injury.
- 11. OPERATE THE TOOL ONLY ON THE WORK-PIECE.





WARNING

The Cordless Finish
Nailer should be operated only when it is contact
with the work surface.
When fastening thin
materials such as
plywood, be sure to
position the tool so that
the fastener is driven into
the underlying piece.

Safety Instructions








DANGER

The Cordless Finish Nailer is an internal combustion device. It produces hot exhaust gases that may ignite flammable materials. This tool must not be used in a combustible environment or in the presence of combustible materials, such as flammable chemicals, adhesives, gasoline, or solvents.

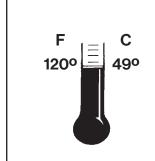




WARNING

Do not expose the tool to temperatures in excess of 120°F (49° C). Fuel and/or the battery may burst, releasing flammable gas.





WARNING

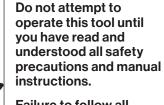

Failure to follow all safety precautions and instructions may result in a permanent loss of vision, serious personal or even fatal injury, property damage and/or tool damage.






WARNING

This tool must be operated only in a well-ventilated environment, because the tool exhausts carbon monoxide similar to a gas chainsaw or lawnmower. Exposure to carbon monoxide may cause dizziness, nausea, or unconsciousness.



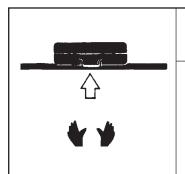



WARNING

ALWAYS keep the Cordless Finish Nailer, fuel cell, battery, and battery charger out of the reach of children.

Safety Instructions

- 12. NEVER DRIVE FASTENERS INTO AREAS WITH CONCEALED HAZARDS.
 - Always check the area behind the work surface for electrical wiring, gas pipes, water pipes, sewer drains, or other potential hazards.
- 13. ALWAYS MAINTAIN SECURE AND UNOB-STRUCTED FOOTING WHEN ON LADDERS, PLATFORMS, OR OTHER HIGH LOCATIONS.






WARNING

Never over-reach, since tool recoil may cause a loss of balance. Always be aware of edges and drop-offs when nailing on rooftops and other high locations. Keep them in full view.

14. ALLOW ONLY QUALIFIED PERSONNEL TO OPERATE THE CORDLESS FINISH NAILER.

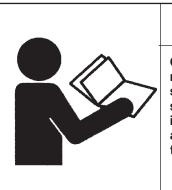




WARNING

Only persons who have read and fully understand all tool operation, safety, and maintenance instructions should be allowed to operate the tool.

Battery Disposal:

The Paslode batteries contain lithium and should be recycled or disposed of properly. It is illegal in some areas to place a lithium battery into the trash or solid waste stream. You may contact your local recycling center for information on where to return the spent battery or call 1-800-822-8837 for information on battery recycling in your area.

15. PROPERLY STORE FUEL CELL.

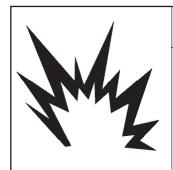



WARNING

Always store fuel cells where they will not be exposed to an open flame, sparks, or temperatures above 120° F (49° C).

- 16. ALWAYS STORE THE TOOL WITH THE FUEL CELL AND BATTERY REMOVED. Store the fuel cell in the case with the Cordless Nailer.
- 17. KEEP THE TOOL CLEAN.
 A clean tool is less likely to jam or malfunction.
- 18. KEEP YOUR HANDS CLEAR OF THE WORK AREA SURFACE.





WARNING

A fastener may exit at an angle unexpectedly and cause injury.

CHARGING SYSTEM SAFETY INSTRUCTIONS!

IMPORTANT SAFETY INSTRUCTIONS! SAVE THESE INSTRUCTIONS!



DANGER



TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS

For connection to a supply outside North America, use an attachment plug adapter of the proper configuration for the power outlet, if needed.

Battery and Charging System

Battery and Charging System

The Paslode Cordless 18GA Straight Brad Finish Nailer comes with a rechargeable battery and its own charging system. This charging system is the **only one that will work with the Paslode lithium-ion batteries.** The first step in preparing a new tool for operation is to fully charge the battery.

New batteries are shipped partially discharged and must be charged prior to first use. Batteries will take 5 minutes to 1.5 hours to recharge (time will be dependent on the amount of discharge of the battery).

Important Charging Notes





WARNING

CHEMICAL / EXPLOSION HAZARD

Read ALL instructions before charging or using battery. Failure to follow ALL instructions may result in fire, severe burns, or release of toxic materials,



Charging System Accessories:

Battery Charger - Part No. 902672

Charging Instructions

- Remove the charger unit from the tool case and plug it into a 120V AC outlet. Set the charger base on a stable surface. A green light will come on to indicate the power is on and the charger circuit is ready.
- 2. Remove the battery from tool or case and insert terminals down into the charger. The red light will come on indicating that the battery is charging and the green light will go out.

NOTE

If battery is completely discharged, the red light and green light may alternate back and forth for up to 20 minutes. This safety feature slowly recharges the battery until it is ready to accept the full charging current. If the red and green lights continue to alternate after 20 minutes, replace the battery.

- 3. After charging is complete, the red light will go out and the green light will come on, indicating that the battery is fully charged. The charger will keep the battery at full charge until it is removed.
- 4. Unplug the charger from the 120V AC outlet.

CHARGING TIMES:


First charge (new battery) 1.5 hours

Discharged Battery: 5 minutes to 1.5 hours

CHARGING DON'TS:

- 1. Do not charge battery outdoors or in temperatures below 45°F (7°C).
- 2. Do not allow metal objects to come in contact with the battery terminals.
- 3. Do not puncture or attempt to open battery case or cells.
- 4. Do not store battery where it will be subjected to temperatures above 120°F (49°C).
- 5. Do not incinerate battery.
- 6. Do not use a defective battery charger, one that overheats and/or smokes when plugged in.
- 7. Do not immerse the battery or charger in water.

Battery and Charging System

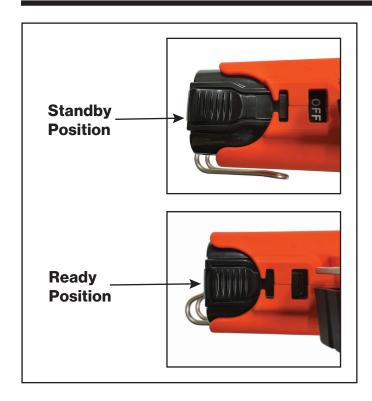

Inserting Battery

- 1. Load the battery, contacts first, into the Cordless Finish Nailer.
- 2. Push battery fully forward into its locked **Ready Position.** The battery indicator light will light.
- 3. To disengage the battery, push down on locking tab and slide battery back until it locks into the **Standby Position.**
- 4. To remove battery, push down on locking tab and slide battery out.

Battery Indicator Light

On the right side of the handle is a small plastic lens. This is the battery indicator light. When you insert a fully-charged battery into the tool, you will see a blinking green light. If the indicator light blinks red, recharge the battery.



NOTE: If battery is left in tool for an extended period, the battery will discharge completely and will require recharging.

Fuel Cell






DANGER

EXPLOSION / FIRE HAZARD

Read ALL safety instructions before using or handling the fuel cartridge. Failure to follow ALL instructions may result in explosion or fire. This may cause severe personal injuries or property damage.



Keep the fuel cell away from heat, sparks, and open flame.

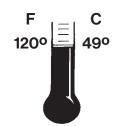

Exposure to temperatures above 120°F (49°C) may cause the fuel cell to burst, releasing flammable gas.

There is a second container inside the fuel cell. The inner container holds the fuel. The space between the inner container and the outer cylinder is filled with a gas, called the propellant, which is under pressure.

To eject the fuel, propellant pressure squeezes the inner fuel container. This squeezing action ensures that all the fuel is used, and that the Cordless Nailer can operate in any position.

Because of this container-within-a-container design, you might hear the sound of fluid when shaking the fuel cell after all the fuel has been used. This is the propellant, which remains between the containers even after all the fuel has been expelled.

If you expose the empty fuel cell to extreme temperatures, the propellant gas will expand and could cause the container to burst, releasing flammable gases.

NOTE

When replacing the fuel cell also clean or replace the air filter for optimum tool operation.



WARNING

Sunlight can raise the inside temperature of an unventilated car or van to above 140°F (60°C).

Never puncture or attempt to open the fuel cell, it is non-refillable.

Never incinerate, reclaim, or recycle the fuel cell.

Never smoke while installing the fuel cell.

Never inhale the spray.

Keep out of the reach of children.

Store fuel cell(s) in well-ventilated areas only.

NOTE: Altitude Restriction

Paslode Cordless technology is powered by an internal combustion engine, which is affected by altitude. The tool may lose power or become erratic at elevations of 6000 feet or greater.

Note:

Paslode Fuel Cells are marked with a "Best Used Before" date on the bottom of the can. For maximum performance use fuel before the "Best Used Before" date.



Paslode Cordless Fuel Cells are flammable. Do not remove fuel cartridge cap or install on other fuel cells!

Paslode Cordless Fuel Cell Disposal Guidelines

Paslode, the industry leader in cordless technology, provides this information to assist users with the proper disposal of discarded fuel cells. Acceptable disposal options vary depending on the type of fuel cell user. All users must consider <u>federal</u>, <u>state</u>, and <u>local</u> solid waste regulations to ensure that discarded fuel cells are disposed of properly. Users must contact their local solid waste authority for further guidance.

Discarded fuel cells (used or unused) may be considered hazardous waste under the Resource Conservation and Recovery Act (RCRA). In general, "household wastes" generated by homeowners and their contractors are exempt from hazardous waste regulation because those wastes are expressly excluded from the definition of hazardous waste. For example U.S. EPA has excluded as "household waste" aerosol cans that contain residual product and propellant. Thus under federal hazardous waste

regulations homeowners and contractors may dispose of discarded fuel cells as general refuse in a properly permitted municipal landfill. These users must still contact their local solid waste authority to determine if any <u>state or local</u> regulation prohibits or restricts such disposal.

Paslode takes no responsibility for improper fuel cell disposal. Proper disposal remains the responsibility of sellers and users. All sellers and users must contact their local solid waste authority to determine if any federal, state, or local regulation prohibits or restricts disposal. Users may obtain more information about U.S. EPA hazardous waste regulations at the following internet address: www.epa.gov

Alternatively users may contact U.S. EPA's Toxic Release Information Center at 1-800-424-9346 to receive more information.

CORRECT FUEL CELL LOADING PROCEDURE



To open - Push forward, lift then back



Open fuel door assembly



Open fuel door fully



Raise fuel tube block assembly, it will lock in up position



Load fuel cell



Carefully align fuel adaptor and cell stem



To close - Push forward, then down to lock fuel door



Note: Fuel cell Dosing Lever must be in the down position

Preparing the Paslode Cordless 18GA Straight Brad Finish Nailer for Use

Fasteners

The Paslode Cordless 18GA Straight Brad Finish Nailer drives Paslode 18 gauge straight brads designed to be used with the tool. The use of fasteners that do not meet Paslode standards could cause tool damage and will void all warranty claims.



Use **only**Paslode 18 gauge
Straight Brad Nails.



Do NOT use Angled Finish Nails!

Loading Fasteners

Release Magazine Cover And Slide Open



Load Nails Towards Front Of Magazine



2

Slide Cover Forward



Close Cover Until Securely Latched



3

Lockout Feature

When the follower reaches the lockout area (5 nails remaining) the tool will automatically lock to prevent it from firing. To unlock the tool, simply reload another strip of nails.

The purpose of this feature is to prevent needless blank cycling, which could mar woods, waste fuel, and damage tool components. Five (5) nails will be left in the magazine when the follower reaches the lockout area. When changing fastener length or loading the tool you should inspect the magazine and nose for any fasteners left in the tool. These nails will not be visible unless you open the quick-clear of the tool.

Paslode Cordless 18GA Straight Brad Finish Nailer and Outdoor Weather

Use the Cordless Finish Nailer outdoors, in dry weather, when the nailer, fuel cell, and battery are between 45°F (7°C) and 120°F (49°C).

Hot Weather Operation

The Cordless Nailer requires cooling of the motor assembly to work properly. The fan normally provides the necessary air flow to permit continuous operation. Whenever the Nailer is idle for extended periods, keep the fuel and tool out of direct sunlight and in surroundings where temperatures will not exceed 120°F (49°C). After extended periods of continuous use, it may be necessary to cool the motor by setting tool aside for 10-15 minutes or until the tool operates normally. An overheated tool may not drive nails completely or may operate erratically.

Cold Weather Operation

When storing the Cordless Nailer in temperatures below 45°F (7°C) it may be necessary to first warm up the fuel and tool for proper operation.

Fuel cells at colder temperatures can lose their required propellant pressure. To correct this simply warm up the fuel cell by placing it in an inside coat pocket for several minutes.

Once the fuel is warm, insert the cartridge into the tool. Quickly depress the tool two times onto the work surface and hold the tool in the down position after the second actuation. Wait one or two seconds, then pull the trigger. This action is referred to as "double-pumping" and provides a richer fuel mixture to the cold tool to help initiate combustion.

Paslode Cordless 18GA Straight Brad Finish Nailer Operation

Cold Weather Operation (Continued)

It will be necessary to repeat this procedure several times until the temperature of the tool warms up enough to operate in its normal mode.

Once the tool reaches operational temperature the tool will generate its own heat and will function normally.

If the tool sits for an extended period of time and cools down it may be necessary to repeat these steps.



WARNING

During the warm-up process, never expose the tool, fuel cell, or battery to flame.



CAUTION

The Cordless Nailer should not be used in the rain or where excessive moisture is present. The use of the Paslode Cordless Technology under these conditions may result in damage to the tool components and cause the tool to malfunction.



PRESS NO MAR PROBE AGAINST THE WORK SURFACE.

Fan motor starts, fuel is injected into combustion chamber and mixed with air by the fan.



SQUEZE TRIGGER Spark plug ignites the fuel/air mixture, driving the piston assembly down on the fastener.



RELEASE TRIGGER-LIFT TOOL Combustion chamber opens. Fan exhausts, cooling internal components.



DANGER

The Probe and nose will become hot after prolonged or rapid use. If it becomes necessary to adjust the Probe, avoid touching it with bare hands.



CAUTION

This tool must be operated in a well ventilated environment, because the tool exhausts carbon monoxide similar to a chainsaw or lawn mower. Exposure to carbon monoxide may cause dizziness, nausea, or unconsciousness.


Depth of Drive Adjustment

Remove the battery before adjusting the depth of drive.

The depth of drive adjustment is done by turning the adjustment wheel as shown by the arrows on the side of the tool.



INCREASE DEPTH OF DRIVE

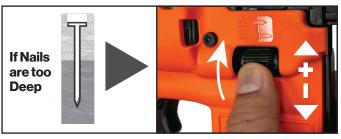


DECREASE DEPTH OF DRIVE

Fasteners and Applications

Applications

The Paslode Cordless 18GA Straight Brad Finish Nailer is suited for a variety of applications. These include securing door and window casings, attaching baseboards where walls meet floors, attaching moldings where walls meet ceilings, securing paneling, chair rails, picture molding and other decorative trim.

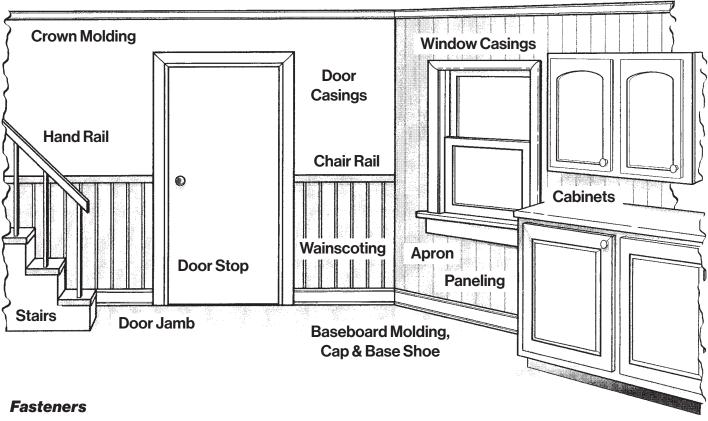

The Paslode Cordless 18GA Straight Brad Finish Nailer drive Paslode 18GA Straight Brads. Fasteners are collated into strips of 50 for easy loading. Paslode fasteners are designed to be used in Paslode tools. Use of other fasteners may cause damage to the tool or injury to the tool operator.

THE DAOL ODE CODD! FOR 400 A CTD 1:0::T	DADT		OUGGESTER
THE PASLODE CORDLESS 18GA STRAIGHT	PART		SUGGESTED
BRAD FINISH NAILER DRIVES THESE NAILS	NO.	LENGTH	APPLICATIONS
——	650212	1"	Cabinetry, Cove Molding, Shoe and Base Molding, Underneath Stair Tread, Mitered Corners, Lattice Strip Molding, Crown Molding, Book Cases
	650213	1-1/4"	Cabinetry, Shoe & Base Molding, Scribe Molding, Crown Molding, Book Cases
——	650214	1-1/2"	Cabinetry, Shoe & Base Molding, Risers, Stairs, Knee Wall, Panel Installation, Wainscoting, Chair Rail, Window Casings, Door Casings, Book Cases
	650215	2"	Cabinetry, Shoe & Base Molding, Spindles, Risers, Stairs, Knee Wall, Panel Installation, Wainscoting, Chair Rail, Window Casings, Door Casings, Book Cases

REPLACING TIP

Restrict Field Service to the Following

CHECKING THE CHARGE LEVEL OF THE BATTERY
RECHARGING THE BATTERY
CHECKING THE FUEL CELL
REPLACING THE FUEL CELL
CLEANING/REPLACING THE AIR FILTER
CLEARING A JAM
CLEANING THE TOOL (See cleaning Manual)

Attempts to go beyond these procedures could result in serious personal injury or damage to the Cordless Nailer and voiding the warranty.

There are certain problems you may encounter when you are using the Cordless Nailer that you will be able to correct on the work site. The following field service procedures are the only service procedures you should attempt. Anything else that may appear wrong with the Cordless Nailer should only be diagnosed and repaired by a fully trained service technician. If you have any reason to believe that your problem is beyond the service procedures in this manual, contact Paslode.



DANGER

Never attempt any maintenance of a Paslode Cordless tool without first removing the fuel cell and battery. Maintenance should be started only after the tool is **completely** inoperative.

Fuel Cartridge Check

If the Cordless Nailer's fan operates and the indicator light is green, but the tool will not cycle or does not drive fasteners completely, check the fuel cell. With the fuel cell out of the tool, check to see if the fuel cell still contains fuel. To determine if there is any fuel left in the fuel cell, hold in the upright position and simply place the metering stem against a solid object, and gently push about three or four times. A small amount of fuel should be released each time.



DANGER

Wear safety glasses when performing this test. Never perform this test near an open flame or sparks, while smoking, or where the fuel might get in your eyes.

If fuel is not released with each operation of the metering stem, this indicates that there is no more fuel left in the fuel cell and it must be replaced. Dispose of the empty fuel cell (see page 11).

Also remember that the fuel cells have a "best used by" date on the bottom of each cell. If your fuel cell is old, it may have lost some power.

Battery Check

Periodically check the battery indicator light in the handle of the Cordless Nailer. When encountering a problem, the first step should always be to make sure the battery has enough charge to operate the tool.

When the Probe is depressed on the work piece, the fan motor should turn on and the blinking green indicator light should turn solid green. If the indicator light blinks red or glows red, recharge the battery.

Clearing a Jam

An occasional problem you may encounter is a jammed fastener. Because of the unique design of the Cordless Nailer, clearing a jammed fastener is easy:

Remove Battery, Fuel, And Nails



Pull Quick Clear Latch Forward to release



Open Front Guide To Release Jam



Return Driver Blade



Close And Latch Front Guide



CLEANING THE AIR FILTER



Use a flat bladed screwdriver to remove cap, ease locking tabs open to avoid damage to cap.



Make sure fuel door is open, then remove filter cover.



Remove filter. Check filter for holes, replace if needed.



Use Cordless Tool Cleaner or soap and water to restore the filter.



Filter will look like new after cleaning.

End-of-Workday Routine

These simple steps are based on maintaining the safety and operational efficiency of the Cordless Nailer.

Before you leave the work site:

- Remove battery and store in tool case. Always use the Cordless Nailer Case for transporting and storing the tool.
- 2. Dispose of all empty fuel cells (see page 11).

 Remember to dispose of fuel cells where they will not be crushed, punctured, burned, or found by children.

When you get home:

- 1. Place the battery in its charger if it needs charging as indicated by the red charge light on the handle.
- 2. Wipe your Cordless Nailer with a clean, soft cloth.
- Remove and clean the filter if needed.
- 4. Check the Probe to ensure it is operating freely.

Paslode Cordless Tool Accessories

A variety of accessories are available for the Paslode Cordless 18GA Straight Brad Finish Nailer:

No-Mar Replacement Tip Single Tip - Part No. 901048

Battery - Part No. 902654

Cordless Tool Cleaner - Part No. 219348

Clear Safety Glasses - Part No. 401382

Paslode Cordless Lubricating Oil - Part No. 401482

Battery Charger - Part No. 902672

Paslode Cordless Finish Nailer Case - Part No. 905640

Contact your Paslode representative for additional information.

Tools

A 9/64 Hex Wrench (Part No. 900736) is provided with each Cordless 18GA Straight Brad Finish Nailer.

1 901064 4 S.H.C.S. 8-32 x 1-3/8" 46 901009 1 Latch Cover 2 904601 1 Grille, Black 47 901150 1 Latch Spring Clip Assembly 3 900648 1 Filter 48 901002 1 Front Plate 4 904557 2 Cap Screw -49 901048 1 Rubber Probe Tip 5 902446 1 Cap 590785 1 Spark Plug, Insulator Sleeve 6 900785 1 Spark Plug, Insulator Sleeve 7 900714 1 Spark Plug, Assembly 8 900596 1 Screw, Sens 3-2 x 7/16" 52 918992 1 Left Handle 9 900739 1 Cylinder Head Circuit Board 10 901119 1 Retaining Ring, Motor 11 901112 1 Motor Assembly 11 901112 1 Motor Assembly 11 901112 1 Motor Sleeve 57 918203 2 Foam Pad, Battery 11 901112 1 Fuel Block 58 918215 1 Warning Label 14 902406 1 Fuel Block 58 918211 1 Magazine Base 15 904521 1 Pivot Arm 60 918245 1 Follower 16 904517 1 Fuel Barb 60 918245 1 Follower 17 901078 1 Piston Assembly 63 901052 2 Screw, Rail 10-32 x 3/8 Hex Fit Hd 18 901078 1 Piston Assembly 63 901052 2 Prostant Force Spring Assembly 19 901040 1 Piston Ring 64 918212 1 Magazine Cover 20 901021 1 Bumper 65 901055 2 C-Piling, Retaining Ring, Sleeve 77 918928 1 Screw, 6-32 x 1/8 BH 22 900709 1 Fan Assembly 67 901061 2 Screw, 6-32 x 1/8 BH 22 900709 1 Fan Assembly 67 901061 2 Screw, 6-32 x 1/8 BH 22 900709 1 Fan Assembly 67 901061 2 Screw, 6-32 x 1/8 BH 23 900612 4 Seal Ring 68 918221 1 Magazine Cover 918926 1 Switch Slide Assembly 24 900700 1 Air Dam 69 900001 1 Magazine End Cap 49 900001 1 Magazine End Cap 49 900001 1 Magazine Latch Spring 79 900662 1 Switch Slide Assembly 25 900739 1 Combustion Chamber Assy. 69 900062 1 Switch Slide Assembly 26 901036 1 Retaining Ring, Sleeve 71 901085 1 Switch Slide Assembly 27 901082 1 Trigger Assembly 77 918926 1 Switch Slide Assembly 28 901037 1 Yoke Spring 73 900662 1 Spring Handle Plant Pla								
2 904601 1 Grille, Black 47 901150 1 Latch Spring Clip Assembly * 3 900648 1 Filter 48 901002 1 Front Plate 5 902446 1 Cap 50 918946 1 Probe 6 900785 1 Spark Plug Assembly 50 918946 1 Probe 6 900739 1 Spark Plug Assembly 52 901097 2 Shoulder Screw 8-32 SHCS P30 8 900596 1 Screw, Sem 8-32 x 7/16" 53 918919 2 Pasiode Logo 9 900739 1 Cylinder Head Circuit Board 54 901066 4 Plasitle Screw 10 901119 1 Retaining Ring, Motor *55 918903 2 Foam Pad, Battery *11 901121 1 Motor Assembly *59 918215 1 Waar Strip *12 401356 1 Fuel Block 59 90060	1	901064	4	SHCS 8-32 x 1-3/8"	46	901009	1	Latch Cover
* 3 900648 1 Filter								
4 904557 2 Cap Screw 5 902446 1 Cap 6 900785 1 Spark Plug, Insulator Sleeve 7 900714 1 Spark Plug Assembly 8 900596 1 Screw, Sen 8-32 x 7/16" 9 900739 1 Cylinder Head Circuit Board 10 901119 1 Retaining Ring 11 901112 1 Motor Assembly 11 901112 1 Motor Sleeve 11 901112 1 Motor Sleeve 11 901456 1 Fuel Tube 11 902406 1 Fuel Block 15 904521 1 Pivot Arm 16 904517 1 Fuel Barb 17 901059 1 Front Channel Extrusion 18 901078 1 Piston Rssembly 19 901078 1 Piston Rssembly 19 901079 1 Piston Rssembly 19 901079 1 Ran Assembly 10 901021 1 Bumper 20 901021 1 Bumper 21 904504 1 Cylinder Head 22 900709 1 Fan Assembly 23 900612 4 Seal Ring 24 900700 1 Air Dam 25 900729 1 Combustion Chamber Assy, 26 901036 1 Tyoke Spring 27 901036 1 Tyoke Spring 28 901036 1 Tyoke Spring 29 900746 2 Screw, 8-32 x 7/16" 30 901037 1 Yoke 30 901037 1 Poke Bumper 31 Noter Assembly 32 900746 2 Screw, 8-32 x 7/16" 33 903710 1 Depth of Drive Assembly 34 405140 4 Screw S-32 x 7/16" 37 900660 1 Reed Valve 38 901086 1 Reed Valve 39 900612 1 Reed Valve 39 900709 1 Fan Assembly 30 900700 1 Read Spring Resembly 31 900700 1 Piston Ring 32 900700 1 Fan Assembly 33 900700 1 Fan Assembly 34 901036 1 Feront Channel Extrusion 35 900660 2 Screw, 6-32 x 1/8 BH 36 900729 1 Combustion Chamber Assy, 37 901061 2 Screw, 6-32 x 1/8 BH 38 901086 1 Screw, 6-32 x 1/8 BH 39 900700 1 Air Dam 40 900700 1 Air Dam 50 900729 1 Combustion Chamber Assy, 50 900729 1 Combustion Chamber Assy, 50 900729 1 Tyoke Bumper 50 900720 1 Screw, 6-32 x 1/8 BH 50 900730 1 Piston Ring 50 900660 1 Reed Valve 50 900730 1 Reed	1			•				
5 902446 1 Cap 50 918946 1 Probe * 7 900714 1 Spark Plug, Insulator Sleeve 51 918922 1 Left Handle * 7 900739 1 Screw, Sem 8-32 x 7/16* 52 901097 2 Shoulder Screw 8-32 SHCS P30 9 900739 1 Cylinder Head Circuit Board 54 901066 4 Plastite Screw 10 901119 1 Retaining Ring, Motor * 55 918203 2 Foam Pad, Battery *11 901112 1 Motor Assembly * 56 918215 1 Warring Label *12 401356 1 Motor Assembly * 56 918213 1 War Strip *13 904546 1 Fuel Block 59 900660 2 Screw, Rail 10-32 x 3/8 Hex Flt Hd *15 904521 1 Pilot Arm 60 918245 1 Follower *18 901059 1 Piston Assembly <td< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></td<>								
6 900785 1 Spark Plug, Insulator Sleeve 51 918922 1 Left Handle * 7 900714 1 Spark Plug Assembly 52 901097 2 Shoulder Screw 8-32 SHCS P30 9 900739 1 Cylinder Head Circuit Board 54 901066 4 Plastite Screw 10 901119 1 Retaining Ring, Motor 55 918903 2 Foam Pad, Battery 11 901112 1 Motor Assembly ** 56 918215 1 Warning Label *11 901112 1 Motor Steeve 57 918228 1 Wear Strip *13 904546 1 Fuel Block 59 900660 2 Screw, Rail 10-32 x 3/8 Hex Flt Hd *15 904521 1 Fuel Blarb 61 901018 2 Fin, Magazine *16 904517 1 Front Channel Extrusion 62 901018 2 Pin, Magazine *19 901078 1 Front C				· · · · · · · · · · · · · · · · · · ·				•
* 7 900714 1 Spark Plug Assembly 52 901097 2 Shoulder Screw 8-32 SHCS P30 8 900596 1 Screw, Sem 8-32 x 7/16" 53 918919 2 Paslode Logo 10 901119 1 Retaining Ring, Motor *55 918903 2 Foam Pad, Battery *11 901112 1 Motor Assembly **56 918215 1 Warning Label *12 401356 1 Motor Sleeve 57 918228 1 Warning Label *13 904546 1 Fuel Tube 58 918211 1 Magazine Base *14 902406 1 Fuel Block 59 900660 2 Screw, Rall 10-32 x 3/8 Hex Flt Hd *15 904521 1 Pivot Arm 60 918245 1 Follower *18 901079 1 Front Channel Extrusion 62 901016 1 Constant Force Spring Assembly *19 901040 1 Piston Ring </td <td></td> <td></td> <td></td> <td>•</td> <td></td> <td></td> <td></td> <td></td>				•				
8 900596 1 Screw, Sem 8-32 x 7/16" 53 918919 2 Paslode Logo 10 901119 1 Retaining Ring, Motor 55 918903 2 Foam Pad, Battery 11 901112 1 Motor Assembly ***56 918215 1 Warning Label *12 401356 1 Motor Sleeve 57 918228 1 Warning Label *13 904546 1 Fuel Block 59 900660 2 Screw, Rail 10-32 x 3/8 Hex FIt Hd 15 904521 1 Pivot Arm 60 918245 1 Follower *16 904521 1 Fuel Barb 61 901018 2 Pin, Magazine Base *16 904521 1 Front Channel Extrusion 62 901018 2 Pin, Magazine Cover *18 901078 1 Piston Assembly 63 901052 1 Spring Cover *19 901040 1 Piston Ring 64			-					
9 900739 1 Cylinder Head Circuit Board 10 901119 1 Retaining Ring, Motor 11 901112 1 Motor Assembly *12 401356 1 Motor Sleeve *13 904546 1 Fuel Tube *14 90456 1 Fuel Block *15 904521 1 Pivot Arm *16 904521 1 Pivot Arm *17 901059 1 Front Channel Extrusion *18 901078 1 Piston Assembly *19 901040 1 Piston Ring *20 901021 1 Bumper *20 901021 1 Bumper *36 904502 1 Cylinder Head *4 901038 1 Yoke Spring *59 900660 2 Screw, Rail 10-32 x 3/8 Hex Flt Hd *59 90660 2 Screw, Rail 10-32 x 3/8 Hex Flt Hd *60 918245 1 Follower *60 918245 1 Follower *60 918245 1 Follower *60 91018 2 Pin, Magazine *61 901018 2 Pin, Magazine *62 901016 1 Constant Force Spring Assembly *63 901052 1 Spring Cover *64 901055 2 O-Ring, Retaining Ring *65 901055 2 O-Ring, Retaining Ring *66 901055 2 O-Ring, Retaining Ring *67 901061 2 Screw, 6-32 x 3/16 BH *79 900709 1 Fan Assembly *68 918224 1 Magazine Latch Spring *79 900709 1 Air Dam *79 900729 1 Combustion Chamber Assy. *70 91082 1 Trigger Assembly *71 901036 1 Retaining Ring, Sleeve *72 901082 1 Trigger Assembly *73 900662 1 Switch Slide Assembly *74 91038 1 Yoke Spring *75 900739 1 Yoke Bumper *76 900629 1 High Tention Clip *39 900734 1 Roll Pin *30 901037 1 Yoke Bumper *77 90466 1 Muffler *31 901039 1 Yoke Bumper *78 900668 1 Muffler *39 900665 1 Reed Valve *39 900665 1 Reed Valve *39 900666 1 Exhaust O-Ring *39 901040 1 Front Plate Support *30 901050 1 Support Pin *30 901050 1 Supp	1							
10								-
11 901112 1 Motor Assembly								
*12 401356 1 Motor Sleeve 57 918228 1 Wear Strip *13 904546 1 Fuel Tube 58 918211 1 Magazine Base 14 902406 1 Fuel Block 59 900660 2 Screw, Rail 10-32 x 3/8 Hex Flt Hd 15 904521 1 Pivot Arm 60 918245 1 Follower *16 904517 1 Fuel Barb 61 901018 2 Pin, Magazine 17 901059 1 Front Channel Extrusion *62 901016 1 Constant Force Spring Assembly *18 901078 1 Piston Assembly 63 901052 1 Spring Cover *19 901040 1 Piston Ring 64 918212 1 Magazine Cover 20 901021 1 Bumper *65 901055 2 O-Ring, Retaining Ring 21 904504 1 Cylinder Head 66 901062 1 Screw, 6-32 x 3/16 BH 22 900709 1 Fin As								
*13 904546 1 Fuel Block 58 918211 1 Magazine Base 14 902406 1 Fuel Block 59 900660 2 Screw, Rail 10-32 x 3/8 Hex Flt Hd 15 904521 1 Pivot Arm 60 918245 1 Follower *16 904517 1 Fuel Barb 61 901018 2 Pin, Magazine *17 901059 1 Front Channel Extrusion 62 901016 1 Constant Force Spring Assembly *18 901078 1 Piston Ring 64 918212 1 Magazine Cover *19 901040 1 Piston Ring 64 918212 1 Magazine Cover *20 901021 1 Bumper 65 901055 2 O-Ring, Retaining Ring *21 904504 1 Cylinder Head 66 901062 1 Screw, 6-32 x 1/8 BH *22 900709 1 Fan Assembly 67 901061 2 Screw, 6-32 x 3/16 BH *23 900612 4 Seal Ring 68 918224 1 Magazine End Cap *24 900700 1 Air Dam 69 900001 1 Magazine Edt Cap *25 900729 1 Combustion Chamber Assy. *26 901036 1 Retaining Ring, Sleeve 71 901095 1 Switch Slide Assembly *27 901082 1 Trigger Assembly 72 918223 1 Right Handle *28 901038 1 Yoke Spring 73 900662 1 MSU Wire Assembly *29 900746 2 Screw,#8-32 x 7/16 74 918938 1 Molded Circuit *30 901037 1 Yoke Bumper 76 900629 1 High Tention Clip *32 900734 1 Roll Pin 77 902440 1 Spark Unit *33 903710 1 Depth of Drive Assembly 78 904567 1 Spark Plug Wire Assembly *34 405140 4 Screw 8-32 x 7/16" 79 904562 1 Fan Wire Assembly *35 900668 1 Muffler 81 904544 1 Dosing Lever *36 90069 1 Muffler 81 904544 1 Dosing Lever *37 900664 1 Reed Valve 82 902235 1 Fuel Door *39 901089 1 Preflitter Disk 84 902230 1 Fuel Door *40 900014 1 Front Plate Support 87 918911 1 Utility Hook Button *41 901003 1 Back Plate 89 918906 1 Utility Hook Button *42 901004 1 Front Plate Support 88 918913 1 Spring, Utility Hook Wire Form				•				
14 902406 1 Fuel Block 59 900660 2 Screw, Rail 10-32 x 3/8 Hex Flt Hd 15 904521 1 Pivot Arm 60 918245 1 Follower 7 Follower 17 901059 1 Front Channel Extrusion 60 9180245 1 Follower 18 901078 1 Piston Assembly 63 901052 1 Spring Cover 19 901040 1 Piston Assembly 63 901052 1 Spring Cover 19 901021 1 Bumper 65 901055 2 O-Ring, Retaining Ring 20 901021 1 Bumper 66 901062 1 Screw, 6-32 x 1/8 BH 22 900709 1 Fan Assembly 67 901061 2 Screw, 6-32 x 1/8 BH 22 900709 1 Fan Assembly 68 918224 1 Magazine End Cap 24 900700 1 Air Dam 69 900001 1 Magazine Latch Spring 25 900729 1 Combustion Chamber Assy. 70 918926 1 Latch Paddle 27 901082 1 Trigger Assembly 72 918223 1 Right Handle 28 901036 1 Retaining Ring, Sleeve 71 901082 1 Trigger Assembly 72 918223 1 Right Handle 29 900746 2 Screw, #8-32 x 7/16 74 918938 1 Molded Circuit 30 901037 1 Yoke Bumper 76 900629 1 High Tention Clip 32 900734 1 Roll Pin 77 902440 1 Spark Unit 33 903710 1 Depth of Drive Assembly 78 904567 1 Spark Plug Wire Assembly 78 900668 1 Muffler Cover 80 901044 1 Spark Unit 36 900665 1 Reed Valve 82 902235 1 Retaining Ring Ring Ring 88 901038 1 Prefilter Disk 84 902230 1 Fuel Door Pin 440 900616 1 Exhaust O-Ring 89 918906 1 Utility Hook Button 442 901004 1 Front Plate Support 87 918911 1 Utility Hook Button 443 901003 1 Back Plate 89 918906 1 Utility Hook, Wire Form								
15 904521 1 Pivot Arm 60 918245 1 Follower 16 904517 1 Fuel Barb 61 901018 2 Pin, Magazine 17 901059 1 Front Channel Extrusion 18 901078 1 Piston Assembly 19 901040 1 Piston Ring 64 918212 1 Magazine Cover 20 901021 1 Bumper 65 901055 2 O-Ring, Retaining Ring 21 904504 1 Cylinder Head 66 901062 1 Screw, 6-32 x 1/8 BH 22 900709 1 Fan Assembly 67 901061 2 Screw, 6-32 x 1/8 BH 22 900709 1 Fan Assembly 67 901061 2 Screw, 6-32 x 3/16 BH 23 900612 4 Seal Ring 68 918224 1 Magazine Latch Spring 25 900729 1 Combustion Chamber Assy. 70 918826 1 Latch Paddle 26 901036 1 Retaining Ring, Sleeve 71 901095 1 Switch Slide Assembly 27 901082 1 Trigger Assembly 72 918223 1 Right Handle 28 901038 1 Yoke Spring 73 900662 1 MSU Wire Assembly 29 900746 2 Screw, #8-32 x 7/16 74 918938 1 Molded Circuit 30 901037 1 Yoke Bumper 76 900629 1 High Tention Clip 32 900734 1 Roll Pin 77 902440 1 Spark Unit 33 903710 1 Depth of Drive Assembly 78 904567 1 Spark Plug Wire Assembly 34 405140 4 Screw 8-32 x 7/16" 79 904562 1 Fan Wire Assembly 36 900608 1 Muffler Cover 80 901044 1 Soft Grip 37 900664 1 Reed Valve 82 902235 1 Retaining Ring 38 900665 1 Reed Plate 83 904550 1 Fuel Door 39 901089 1 Prefilter Disk 84 902230 1 Fuel Door 440 900014 1 Front Plate Support 87 918911 1 Utility Hook Button 441 901003 1 Back Plate 89 918906 1 Utility Hook, Wire Form								
*16 904517 1 Fuel Barb 61 901018 2 Pin, Magazine 17 901059 1 Front Channel Extrusion *62 901016 1 Constant Force Spring Assembly *18 901078 1 Piston Assembly 63 901021 1 Spring Cover *19 901021 1 Bumper *65 901055 2 O-Ring, Retaining Ring 21 904504 1 Cylinder Head 66 901062 1 Screw, 6-32 x 1/8 BH *22 900709 1 Fan Assembly 67 901062 1 Screw, 6-32 x 1/8 BH *23 900612 4 Seal Ring 68 918224 1 Magazine End Cap *24 900700 1 Air Dam 69 900001 1 Magazine End Cap *25 900729 1 Combustion Chamber Assy. 70 918926 1 Latch Paddle *26 901038 1 Tringer Assembly 72								
17 901059 1 Front Channel Extrusion * 62 901016 1 Constant Force Spring Assembly *18 901078 1 Piston Assembly 63 901052 1 Spring Cover *19 901040 1 Piston Ring 64 918212 1 Magazine Cover 20 901021 1 Bumper * 65 901055 2 O-Ring, Retaining Ring 21 904504 1 Cylinder Head 66 901062 1 Screw, 6-32 x 1/8 BH *23 900612 4 Seal Ring 68 918224 1 Magazine End Cap *24 900700 1 Air Dam 69 900001 1 Magazine Latch Spring *25 900729 1 Combustion Chamber Assy. 70 918926 1 Latch Paddle *27 901082 1 Trigger Assembly 72 918233 1 Right Handle *28 901038 1 Yoke Spring 73								
*18 901078 1 Piston Assembly 63 901052 1 Spring Cover *19 901040 1 Piston Ring 64 918212 1 Magazine Cover 20 901021 1 Bumper 65 901055 2 O-Ring, Retaining Ring 21 904504 1 Cylinder Head 66 901062 1 Screw, 6-32 x 1/8 BH 22 900709 1 Fan Assembly 67 901061 2 Screw, 6-32 x 3/16 BH *23 900612 4 Seal Ring 68 918224 1 Magazine End Cap 24 900700 1 Air Dam 69 900001 1 Magazine Latch Spring 25 900729 1 Combustion Chamber Assy. 26 901036 1 Retaining Ring, Sleeve 71 901095 1 Switch Slide Assembly 27 901082 1 Trigger Assembly 72 918223 1 Right Handle 28 901038 1 Yoke Spring 73 900662 1 MSU Wire Assembly 29 900746 2 Screw,#8-32 x 7/16 74 918938 1 Molded Circuit *30 901037 1 Yoke 75 404702 1 Screw, Molded Circuit *31 901039 1 Yoke Bumper 76 900629 1 High Tention Clip 32 900734 1 Roll Pin 77 902440 1 Spark Unit 33 903710 1 Depth of Drive Assembly 79 904562 1 Fan Wire Assembly ■ 34 405140 4 Screw 8-32 x 7/16" 79 904562 1 Fan Wire Assembly ■ 35 900668 1 Muffler 81 904544 1 Dosing Lever 37 900664 1 Reed Valve 82 902235 1 Retaining Ring 38 900665 1 Reed Plate 83 904550 1 Fuel Door 39 901089 1 Prefilter Disk 84 902230 1 Fuel Door 40 900616 1 Exhaust O-Ring 85 918909 1 Utility Hook Button ■ 41 901026 2 Screw 42 901004 1 Front Plate Support 87 918911 1 Utility Hook Button 44 901003 1 Back Plate 89 918906 1 Utility Hook, Wire Form	* 16	904517	1			901018		
*19 901040 1 Piston Ring 64 918212 1 Magazine Cover 20 901021 1 Bumper *65 901055 2 O-Ring, Retaining Ring 21 904504 1 Cylinder Head 66 901062 1 Screw, 6-32 x 3/16 BH 22 900709 1 Fan Assembly 67 901061 2 Screw, 6-32 x 3/16 BH *23 900612 4 Seal Ring 68 918224 1 Magazine End Cap 24 900709 1 Air Dam 69 900001 1 Magazine Latch Spring 25 900729 1 Combustion Chamber Assy. 70 918926 1 Latch Paddle 26 901036 1 Retaining Ring, Sleeve 71 901095 1 Switch Slide Assembly 27 901082 1 Trigger Assembly 72 918223 1 Right Handle 28 901038 1 Yoke Spring 73 <t< td=""><td>17</td><td>901059</td><td>1</td><td></td><td></td><td>901016</td><td></td><td></td></t<>	17	901059	1			901016		
20 901021 1 Bumper	* 18	901078	1	Piston Assembly			1	
21 904504 1 Cylinder Head 66 901062 1 Screw, 6-32 x 1/8 BH 22 900709 1 Fan Assembly 67 901061 2 Screw, 6-32 x 3/16 BH 23 900612 4 Seal Ring 68 918224 1 Magazine End Cap 24 900700 1 Air Dam 69 900001 1 Magazine Latch Spring 25 900729 1 Combustion Chamber Assy. 70 918926 1 Latch Paddle 26 901036 1 Retaining Ring, Sleeve 71 901095 1 Switch Slide Assembly 27 901082 1 Trigger Assembly 72 918223 1 Right Handle 28 901038 1 Yoke Spring 73 900662 1 MSU Wire Assembly 29 900746 2 Screw,#8-32 x 7/16 74 918938 1 Molded Circuit 30 901037 1 Yoke 75 404702 1 Screw,Molded Circuit 31 901039 1 Yoke Bumper 76 900629 1 High Tention Clip 32 900734 1 Roll Pin 77 902440 1 Spark Unit 33 903710 1 Depth of Drive Assembly 78 904567 1 Spark Plug Wire Assembly 34 405140 4 Screw 8-32 x 7/16" 79 904562 1 Fan Wire Assembly 35 900668 1 Muffler 81 904544 1 Dosing Lever 37 900664 1 Reed Valve 82 902235 1 Retaining Ring 38 900665 1 Reed Plate 83 904550 1 Fuel Door 39 901089 1 Prefilter Disk 84 902230 1 Fuel Door 40 900616 1 Exhaust O-Ring 85 918909 1 Utility Hook Cap Nut 41 901026 2 Screw 86 918110 1 Utility Hook Block 43 901025 1 Support Pin 88 918913 1 Spring, Utility Hook Block 44 901003 1 Back Plate 89 918906 1 Utility Hook, Wire Form	* 19	901040	1	Piston Ring		918212	1	
22 900709 1 Fan Assembly 67 901061 2 Screw, 6-32 x 3/16 BH *23 900612 4 Seal Ring 68 918224 1 Magazine End Cap 24 900700 1 Air Dam 69 900001 1 Magazine Latch Spring 25 900729 1 Combustion Chamber Assy. 26 901036 1 Retaining Ring, Sleeve 71 901095 1 Switch Slide Assembly 27 901082 1 Trigger Assembly 72 918223 1 Right Handle 28 901038 1 Yoke Spring 73 900662 1 MSU Wire Assembly 29 900746 2 Screw,#8-32 x 7/16 74 918938 1 Molded Circuit 30 901037 1 Yoke 75 404702 1 Screw,Molded Circuit *31 901039 1 Yoke Bumper 76 900629 1 High Tention Clip 32 900734 1 Roll Pin 77 902440 1 Spark Unit 33 903710 1 Depth of Drive Assembly 78 904567 1 Spark Plug Wire Assembly 35 900668 1 Muffler 79 904562 1 Fan Wire Assembly 36 900609 1 Muffler 81 904544 1 Dosing Lever 37 900664 1 Reed Valve 82 902235 1 Retaining Ring 38 90065 1 Reed Plate 83 904550 1 Fuel Door 39 901089 1 Prefilter Disk 84 902230 1 Fuel Door 39 901089 1 Prefilter Disk 84 902230 1 Fuel Door 40 900616 1 Exhaust O-Ring 85 918909 1 Utility Hook Cap Nut 41 901026 2 Screw 86 918110 1 Utility Hook Block 43 901025 1 Support Pin 88 918913 1 Spring, Utility Hook Wire Form	20	901021	1	Bumper	* 65	901055	2	O-Ring, Retaining Ring
*23 900612 4 Seal Ring 68 918224 1 Magazine End Cap 24 900700 1 Air Dam 69 900001 1 Magazine Latch Spring 25 900729 1 Combustion Chamber Assy. 70 918926 1 Latch Paddle 26 901036 1 Retaining Ring, Sleeve 71 901095 1 Switch Slide Assembly 27 901082 1 Trigger Assembly 72 918223 1 Right Handle 28 901038 1 Yoke Spring 73 900662 1 MSU Wire Assembly 29 900746 2 Screw,#8-32 x 7/16 74 918938 1 Molded Circuit 30 901037 1 Yoke 75 404702 1 Screw,Molded Circuit *31 901039 1 Yoke Bumper 76 900629 1 High Tention Clip 32 900734 1 Roll Tention Clip 77 9	21	904504	1	Cylinder Head		901062	1	Screw, 6-32 x 1/8 BH
24 900700 1 Air Dam	22	900709	1	Fan Assembly	67	901061	2	Screw, 6-32 x 3/16 BH
25 900729 1 Combustion Chamber Assy. 26 901036 1 Retaining Ring, Sleeve 71 901095 1 Switch Slide Assembly 27 901082 1 Trigger Assembly 72 918223 1 Right Handle 28 901038 1 Yoke Spring 73 900662 1 MSU Wire Assembly 29 900746 2 Screw,#8-32 x 7/16 74 918938 1 Molded Circuit 30 901037 1 Yoke 75 404702 1 Screw,Molded Circuit *31 901039 1 Yoke Bumper 76 900629 1 High Tention Clip 32 900734 1 Roll Pin 77 902440 1 Spark Unit 33 903710 1 Depth of Drive Assembly 78 904567 1 Spark Plug Wire Assembly ■ 34 405140 4 Screw 8-32 x 7/16" 79 904562 1 Fan Wire Assembly 35 900668 1 Muffler 81 904544 1 Dosing Lever 37 900664 1 Reed Valve 82 902235 1 Retaining Ring 38 900665 1 Reed Plate 83 904550 1 Fuel Door 39 901089 1 Prefilter Disk 84 902230 1 Fuel Door 39 901089 1 Prefilter Disk 85 918909 1 Utility Hook Cap Nut ■ *40 900616 1 Exhaust O-Ring 87 918911 1 Utility Hook Block 43 901025 1 Support Pin 88 918913 1 Spring, Utility Hook * 44 901003 1 Back Plate 89 918906 1 Utility Hook, Wire Form	* 23	900612	4	Seal Ring	68	918224	1	Magazine End Cap
25 900729 1 Combustion Chamber Assy. 26 901036 1 Retaining Ring, Sleeve 71 901095 1 Switch Slide Assembly 27 901082 1 Trigger Assembly 72 918223 1 Right Handle 28 901038 1 Yoke Spring 73 900662 1 MSU Wire Assembly 29 900746 2 Screw,#8-32 x 7/16 74 918938 1 Molded Circuit 30 901037 1 Yoke 75 404702 1 Screw,Molded Circuit *31 901039 1 Yoke Bumper 76 900629 1 High Tention Clip 32 900734 1 Roll Pin 77 902440 1 Spark Unit 33 903710 1 Depth of Drive Assembly 78 904567 1 Spark Plug Wire Assembly 34 405140 4 Screw 8-32 x 7/16" 79 904562 1 Fan Wire Assembly 35 900668 1 Muffler 81 904544 1 Dosing Lever 37 900664 1 Reed Valve 82 902235 1 Retaining Ring 38 900665 1 Reed Plate 83 904550 1 Fuel Door 39 901089 1 Prefilter Disk 84 902230 1 Fuel Door 39 901089 1 Prefilter Disk 85 918909 1 Utility Hook Cap Nut 41 901026 2 Screw 86 918110 1 Utility Hook Block 43 901025 1 Support Pin 88 918913 1 Spring, Utility Hook *44 901003 1 Back Plate 89 918906 1 Utility Hook, Wire Form	24	900700	1	•	69	900001	1	Magazine Latch Spring
26 901036 1 Retaining Ring, Sleeve 71 901095 1 Switch Slide Assembly 72 901082 1 Trigger Assembly 72 918223 1 Right Handle 73 900662 1 MSU Wire Assembly 73 900662 1 MSU Wire Assembly 74 918938 1 Molded Circuit 75 404702 1 Screw, Molded Circuit 75 404702 1 Screw, Molded Circuit 76 900629 1 High Tention Clip 77 900640 1 Spark Unit 77 902440 1 Spark Unit 77 90440 1 Spark Unit 78 904567 1 Spark Plug Wire Assembly 79 904562 1 Fan Wire Assembly 79 904564 1 Spark Plug Wire Assembly 79 904562 1 Fan Wire Assembly 79 904562 1 Fa	25	900729	1	Combustion Chamber Assy.	70	918926	1	Latch Paddle
27 901082 1 Trigger Assembly 72 918223 1 Right Handle 28 901038 1 Yoke Spring 73 900662 1 MSU Wire Assembly 29 900746 2 Screw,#8-32 x 7/16 74 918938 1 Molded Circuit 30 901037 1 Yoke 75 404702 1 Screw,Molded Circuit *31 901039 1 Yoke Bumper 76 900629 1 High Tention Clip 32 900734 1 Roll Pin 77 902440 1 Spark Unit 33 903710 1 Depth of Drive Assembly 78 904567 1 Spark Plug Wire Assembly 34 405140 4 Screw 8-32 x 7/16" 79 904562 1 Fan Wire Assembly 35 900668 1 Muffler Cover 80 901044 1 Soft Grip 36 900609 1 Muffler 81 904544 1 Dosing Lever 37 900664 1 Reed Valve 82 902235 1 Retaining Ring 38 900665 1 Reed Plate 83 904550 1 Fuel Door 39 901089 1 Prefilter Disk 84 902230 1 Fuel Door 39 901089 1 Prefilter Disk 84 902230 1 Fuel Door 40 900616 1 Exhaust O-Ring 85 918909 1 Utility Hook Cap Nut 41 901026 2 Screw 86 918110 1 Utility Hook Button 42 901004 1 Front Plate Support 87 918911 1 Utility Hook Block 43 901025 1 Support Pin 88 918913 1 Spring, Utility Hook *44 901003 1 Back Plate 89 918906 1 Utility Hook, Wire Form		901036	1		71	901095	1	Switch Slide Assembly
28 901038 1 Yoke Spring 73 900662 1 MSU Wire Assembly 29 900746 2 Screw,#8-32 x 7/16 74 918938 1 Molded Circuit 30 901037 1 Yoke 75 404702 1 Screw,Molded Circuit *31 901039 1 Yoke Bumper 76 900629 1 High Tention Clip 32 900734 1 Roll Pin 77 902440 1 Spark Unit 33 903710 1 Depth of Drive Assembly 78 904567 1 Spark Plug Wire Assembly 34 405140 4 Screw 8-32 x 7/16" 79 904562 1 Fan Wire Assembly 35 900668 1 Muffler Cover 80 901044 1 Soft Grip 36 900609 1 Muffler 81 904544 1 Dosing Lever 37 900664 1 Reed Valve 82 902235 1 Retaining Ring 38 900665 1 Reed Plate 83 904550 1 Fuel Door 39 901089 1 Prefilter Disk 84 902230 1 Fuel Door Pin *40 900616 1 Exhaust O-Ring 85 918909 1 Utility Hook Cap Nut ■*41 901026 2 Screw 86 918110 1 Utility Hook Block 43 901025 1 Support Pin 88 918913 1 Spring, Utility Hook *44 901003 1 Back Plate 89 918906 1 Utility Hook, Wire Form		901082			72	918223	1	
29 900746 2 Screw,#8-32 x 7/16 74 918938 1 Molded Circuit 30 901037 1 Yoke 75 404702 1 Screw,Molded Circuit *31 901039 1 Yoke Bumper 76 900629 1 High Tention Clip 32 900734 1 Roll Pin 77 902440 1 Spark Unit 33 903710 1 Depth of Drive Assembly 78 904567 1 Spark Plug Wire Assembly ■ 34 405140 4 Screw 8-32 x 7/16" 79 904562 1 Fan Wire Assembly 35 900668 1 Muffler Cover 80 901044 1 Soft Grip 36 900609 1 Muffler 81 904544 1 Dosing Lever 37 900664 1 Reed Valve 82 902235 1 Retaining Ring 38 900665 1 Reed Plate 83 904550 1 Fuel Door 39 901089 1 Prefilter Disk 84 902230 1 Fuel Door Pin *40 900616 1 Exhaust O-Ring 85 918909 1 Utility Hook Cap Nut ■*41 901026 2 Screw 86 918110 1 Utility Hook Button 42 901004 1 Front Plate Support 87 918911 1 Utility Hook Block 43 901025 1 Support Pin 88 918913 1 Spring, Utility Hook *44 901003 1 Back Plate 89 918906 1 Utility Hook, Wire Form					73	900662	1	S .
30 901037 1 Yoke 75 404702 1 Screw,Molded Circuit *31 901039 1 Yoke Bumper 76 900629 1 High Tention Clip 32 900734 1 Roll Pin 77 902440 1 Spark Unit 33 903710 1 Depth of Drive Assembly 78 904567 1 Spark Plug Wire Assembly ■ 34 405140 4 Screw 8-32 x 7/16" 79 904562 1 Fan Wire Assembly 35 900668 1 Muffler Cover 80 901044 1 Soft Grip 36 900609 1 Muffler 81 904544 1 Dosing Lever 37 900664 1 Reed Valve 82 902235 1 Retaining Ring 38 900665 1 Reed Plate 83 904550 1 Fuel Door 39 901089 1 Prefilter Disk 84 902230 1 Fuel Door Pin *40 900616 1 Exhaust O-Ring 85 918909 1 Utility Hook Cap Nut ■*41 901026 2 Screw 86 918110 1 Utility Hook Button 42 901004 1 Front Plate Support 87 918911 1 Utility Hook Block 43 901025 1 Support Pin 88 918913 1 Spring, Utility Hook *44 901003 1 Back Plate 89 918906 1 Utility Hook, Wire Form					74	918938	1	•
*31 901039 1 Yoke Bumper 76 900629 1 High Tention Clip 32 900734 1 Roll Pin 77 902440 1 Spark Unit 33 903710 1 Depth of Drive Assembly 78 904567 1 Spark Plug Wire Assembly 34 405140 4 Screw 8-32 x 7/16" 79 904562 1 Fan Wire Assembly 35 900668 1 Muffler Cover 80 901044 1 Soft Grip 36 900609 1 Muffler 81 904544 1 Dosing Lever 37 900664 1 Reed Valve 82 902235 1 Retaining Ring 38 900665 1 Reed Plate 83 904550 1 Fuel Door 39 901089 1 Prefilter Disk 84 902230 1 Fuel Door Pin *40 900616 1 Exhaust O-Ring 85 918909 1 Utility Hook Cap Nut ■*41 901026 2 Screw 86 918110 1 Utility Hook Blutton 42 901004 1 Front Plate Support 87 918911 1 Utility Hook Block 43 901025 1 Support Pin 88 918913 1 Spring, Utility Hook *44 901003 1 Back Plate 89 918906 1 Utility Hook, Wire Form					75			
32 900734 1 Roll Pin 77 902440 1 Spark Unit 33 903710 1 Depth of Drive Assembly 78 904567 1 Spark Plug Wire Assembly 78 904562 1 Fan Wire Assembly 34 405140 4 Screw 8-32 x 7/16" 79 904562 1 Fan Wire Assembly 35 900668 1 Muffler 80 901044 1 Soft Grip 36 900609 1 Muffler 81 904544 1 Dosing Lever 81 904544 1 Dosing Lever 82 902235 1 Retaining Ring 83 900665 1 Reed Plate 83 904550 1 Fuel Door 39 901089 1 Prefilter Disk 84 902230 1 Fuel Door Pin 40 900616 1 Exhaust O-Ring 85 918909 1 Utility Hook Cap Nut 901004 1 Front Plate Support 87 918911 1 Utility Hook Block 43 901025 1 Support Pin 88 918913 1 Spring, Utility Hook Wire Form								
33 903710 1 Depth of Drive Assembly 34 405140 4 Screw 8-32 x 7/16" 35 900668 1 Muffler Cover 36 900609 1 Muffler 37 900664 1 Reed Valve 38 900665 1 Reed Plate 39 901089 1 Prefilter Disk 40 900616 1 Exhaust O-Ring 41 901026 2 Screw 42 901004 1 Front Plate Support 43 901025 1 Support Pin 44 901003 1 Back Plate 89 904562 1 Fan Wire Assembly 79 904562 1 Fan Wire Assembly 80 901044 1 Soft Grip 80 901044 1 Dosing Lever 81 904544 1 Dosing Lever 82 902235 1 Retaining Ring 83 904550 1 Fuel Door 904562 1 Fuel Door 84 902230 1 Fuel Door Pin 85 918909 1 Utility Hook Cap Nut 86 918110 1 Utility Hook Button 87 918911 1 Utility Hook Block 89 918906 1 Utility Hook, Wire Form				•				
■ 34								
35 900668 1 Muffler Cover 80 901044 1 Soft Grip 36 900609 1 Muffler 81 904544 1 Dosing Lever 82 902235 1 Retaining Ring 83 900665 1 Reed Valve 82 902235 1 Retaining Ring 901089 1 Prefilter Disk 84 902230 1 Fuel Door Pin 40 900616 1 Exhaust O-Ring 85 918909 1 Utility Hook Cap Nut 901026 2 Screw 86 918110 1 Utility Hook Button 42 901004 1 Front Plate Support 87 918911 1 Utility Hook Block 43 901025 1 Support Pin 88 918913 1 Spring, Utility Hook Wire Form								
36 900609 1 Muffler 81 904544 1 Dosing Lever 37 900664 1 Reed Valve 82 902235 1 Retaining Ring 38 900665 1 Reed Plate 83 904550 1 Fuel Door 39 901089 1 Prefilter Disk 84 902230 1 Fuel Door Pin *40 900616 1 Exhaust O-Ring 85 918909 1 Utility Hook Cap Nut ■*41 901026 2 Screw 86 918110 1 Utility Hook Button 42 901004 1 Front Plate Support 87 918911 1 Utility Hook Block 43 901025 1 Support Pin 88 918913 1 Spring, Utility Hook *44 901003 1 Back Plate 89 918906 1 Utility Hook, Wire Form								
37 900664 1 Reed Valve 82 902235 1 Retaining Ring 38 900665 1 Reed Plate 83 904550 1 Fuel Door 39 901089 1 Prefilter Disk 84 902230 1 Fuel Door Pin *40 900616 1 Exhaust O-Ring 85 918909 1 Utility Hook Cap Nut ■*41 901026 2 Screw 86 918110 1 Utility Hook Button 42 901004 1 Front Plate Support 87 918911 1 Utility Hook Block 43 901025 1 Support Pin 88 918913 1 Spring, Utility Hook *44 901003 1 Back Plate 89 918906 1 Utility Hook, Wire Form			-					
38 900665 1 Reed Plate 83 904550 1 Fuel Door 39 901089 1 Prefilter Disk 84 902230 1 Fuel Door Pin 440 900616 1 Exhaust O-Ring 85 918909 1 Utility Hook Cap Nut ■ 41 901026 2 Screw 86 918110 1 Utility Hook Button 42 901004 1 Front Plate Support 87 918911 1 Utility Hook Block 43 901025 1 Support Pin 88 918913 1 Spring, Utility Hook * 44 901003 1 Back Plate 89 918906 1 Utility Hook, Wire Form								
39 901089 1 Prefilter Disk 84 902230 1 Fuel Door Pin *40 900616 1 Exhaust O-Ring 85 918909 1 Utility Hook Cap Nut ■*41 901026 2 Screw 86 918110 1 Utility Hook Button 42 901004 1 Front Plate Support 87 918911 1 Utility Hook Block 43 901025 1 Support Pin 88 918913 1 Spring, Utility Hook *44 901003 1 Back Plate 89 918906 1 Utility Hook, Wire Form								0 0
*40 900616 1 Exhaust O-Ring 85 918909 1 Utility Hook Cap Nut ■*41 901026 2 Screw 86 918110 1 Utility Hook Button 42 901004 1 Front Plate Support 87 918911 1 Utility Hook Block 43 901025 1 Support Pin 88 918913 1 Spring, Utility Hook * 44 901003 1 Back Plate 89 918906 1 Utility Hook, Wire Form								
*41 901026 2 Screw 86 918110 1 Utility Hook Button 42 901004 1 Front Plate Support 87 918911 1 Utility Hook Block 43 901025 1 Support Pin 88 918913 1 Spring, Utility Hook * 44 901003 1 Back Plate 89 918906 1 Utility Hook, Wire Form								
42 901004 1 Front Plate Support 87 918911 1 Utility Hook Block 43 901025 1 Support Pin 88 918913 1 Spring, Utility Hook * 44 901003 1 Back Plate 89 918906 1 Utility Hook, Wire Form				_				
43 901025 1 Support Pin 88 918913 1 Spring, Utility Hook * 44 901003 1 Back Plate 89 918906 1 Utility Hook, Wire Form								
* 44 901003 1 Back Plate 89 918906 1 Utility Hook, Wire Form								
45 900685 1 Latch Cover Pin					89	918906	1	Utility Hook, Wire Form
	45	900685	1	Latch Cover Pin				


- Denotes Normal Wear Items
- Apply Loctite RC-620 (Green) Make sure Warning Label (918921) is properly affixed replace if necessary.
- Denotes Change

SAFETY INSTRUCTIONS

WEAR EYE AND HEARING PROTECTION



Always wear hearing protection and eye protection devices, including side shields when operating or working in the vicinity of a tool.

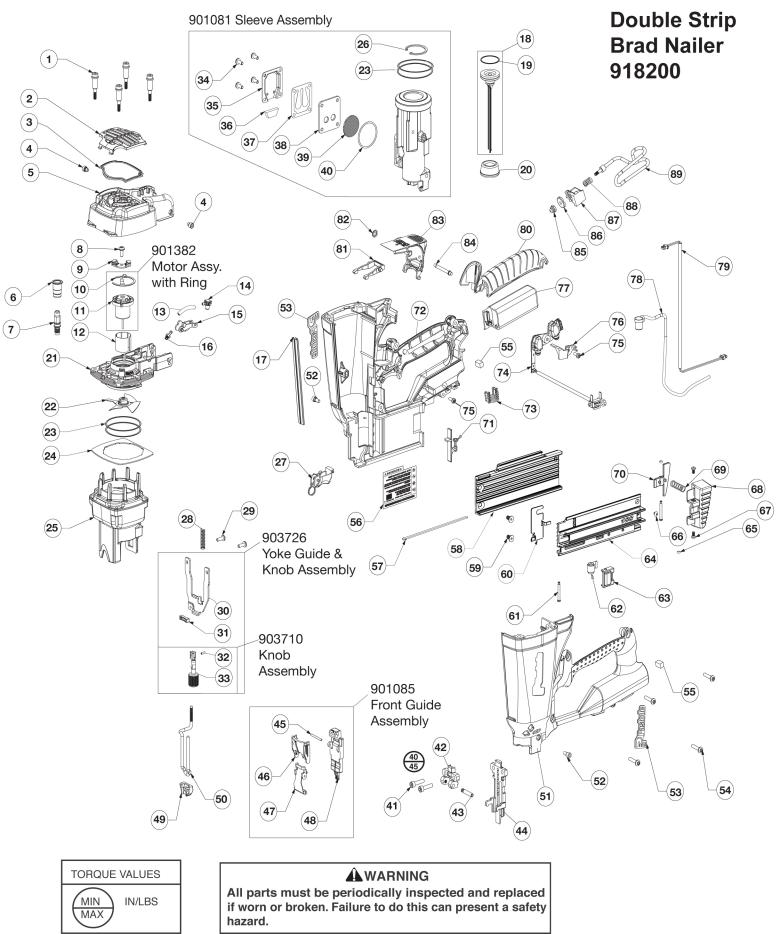

Troubleshooting

Preparing Tool for Operation - Battery/Charger Problems

SYMPTOM	POSSIBLE PROBLEMS	SERVICE
Battery does not appear to accept charge when battery is plugged into the charger.	Inoperative indicator lights on charger, or defective charger.	Try battery in tool after a full charge cycle. If tool's indicator light is red, charger is not working properly. Replace charger, or monitor charging time to ensure battery has adequate time for recharging. It is normal for battery to feel warm after properly charging.
	Battery damaged or cycle life exhausted.	Replace battery.
Charger gets hot, makes excessively loud noise, or smokes during charging cycle. Charger cord or wall plug gets hot.	Damaged charger.	Discontinue use immediately and unplug from power source. Replace charger and tag or dispose of charger to prevent accidental re-use or connection to power source.

Normal Stage of Operation

SYMPTOM	POSSIBLE PROBLEMS	SERVICE	
Fan does not run - tool indicator light is blinking red or solid red.	Battery is not charged.	Charge battery.	
billiking red of solid red.	Battery terminals are oily, dirty, or corroded.	Clean battery terminals with a soft cloth.	
Fan does not run, or runs slower than normal - tool indicator light is solid red.	Battery is discharged.	Charge battery.	
Probe does not depress fully - tool does not operate.	Probe is bent, or build-up of debris in track resists operation.	Carefully remove and inspect the Probe. Clean track. Repair or replace Probe as required.	
	Lockout feature is engaged.	Add strip of nails.	
Tool will not cycle - fan runs, indicator light is solid green.	Fuel cell empty.	Replace fuel cell.	
iigittis sond green.	Spark wire out of spark plug.	Remove cap and check spark lead, insert in spark plug and replace cover.	
	Spark plug is dirty.	Clean tool cylinder head.	
	No spark is generated.	Return tool to authorized Paslode dealer for service.	

If tool will not operate after following the above service directions, return the tool to an authorized Paslode representative for service.

For technical support call: 1-800-222-6990 or email: tech@paslode.com



Troubleshooting

Normal Stage of Operation

SYMPTOM	POSSIBLE PROBLEMS	SERVICE
Tool operates properly, but fasteners do not drive fully.	Depth of Drive requires adjustment.	Adjust Depth of Drive.
not anversally.	Fuel cell is low.	Check fuel cell and replace as required.
	There may be loss of seal in combustion chamber.	Press and hold No Mar Probe against workpiece for one minute. Pull trigger. If fastener does not drive, there is a leak that requires service.
Tool operates properly, but fasteners are sometimes overdriven, and sometimes underdriven.	Depth of Drive is not adjusted properly for the type of material being fastened.	Adjust Depth of Drive. Readjust as required when material density or thickness of material being fastened changes.
	Tool is Overheated	Set tool aside for 10-15 minutes until cool
Tool operates, but no fastener is driven.	Wrong fasteners being used.	Use only fasteners meeting Paslode specifications. Check Fasteners and Applications section for fastener types and sizes recommended for use in this Paslode Cordless tool.
	Follower not properly engaged behind fastener strip.	Position follower behind fastener strip and engage strip.
	Jammed fastener.	Clear jam.
	Fuel cell is low.	Check fuel cell.
Tool operates erratically or appears to be	Spark plug wire is loose.	Check spark plug wire.
losing power - tool indicator light is green.	Air filter is dirty, causing tool to overheat.	Remove air filter and clean. Use soap and water to remove stubborn debris.
	Tool is dirty.	Clean tool.
Tool operated and drove fasteners, but driver blade did not return to up position.	Built-up dirt and debris on driver blade or in nose bore.	Clean driver blade and nose bore with Cordless Tool Cleaner.
arror blade did not return to up position.	Tool is dirty.	Clean tool.
Combustion chamber does not drop after tool cycles.	No Mar Probe is bent, or is dirty.	Clean track or replace No Mar Probe.



Work all day, every day if your nailer stops for any reason, we'll fix it. No questions. No hassles. NO COST!

Still not working? Here are more options:

- Your nailer may qualify for our Cordless 2 Year Service Promise. Visit paslode.com for more information, or call us at 1-800-222-6990.
- Keep you Cordless Nailer in top form. Visit paslode.com and watch our Cleaning and Maintenance videos

